

INDEX

Assembly and set up of the chair and basin	2
Spa pedicure armchair, model CALN (ref. 4122B)	3
Type of massage	4
General settings of the chair and audio	5
Facilities and features of the basin	7
Technical sheet	7

Enjoy a **CALN** massage

COMFORT
CARE
RELAX
WELL-BEING

Have a rest in our **CALN** armchair and forget all the rest

Weelko brings the relax of thermal spaces into a special line of tables conceived for spa and wellness centres. The warmth of the wood, the gentle touch of the upholstery and the width of the table make them key elements to create minimalist environments of calm and well-being.

Find it out inside.



Assembly and set up of the armchair and basin

Packaging

The product is prepared in two packages with the following dimensions:

BASE: 147 x 85 x 53 cm
ARMCHAIR: 120 x 77 x 62 cm

Assembly

Check our video in WEELKO TV to help you assemble the chair. It also points out the features and benefits that the CALN chair can offer. You can also find the video in Vimeo channel.



*These images slightly differ from the final product.

SPA pedicure armchair, model CALN (ref. 4122B)**Description**

Spa pedicure armchair of a comfortable and elegant design with high-quality PU upholstery. It is equipped with 2 motors that adjust the inclination of the backrest and the back and forth of the seat. Reclining armrests that ease access to the seat and include a manicure bowl. Shiatsu massage on the back and air-pressure massage on the seat. Whirlpool foot-SPA basin with shower. Padding footrest and adjustable in height.

Upholstery colour

- White

Standard equipment

- Connection for MP3 devices and SD card.
- Hand controller to select the kind of massage.
- Whirlpool foot-SPA basin with shower.
- Manicure bowls



Type of massage


Air-pressure massage

Massage applied into the seat and controlled by the hand controller. The air pressure is adjustable.



Mechanical dorsal massage

It consists of a wheeled mechanism placed inside the backrest. It is adapted in width and height and applies a dorsal massage, from the cervical area to the lumbar one. There's a choice between different types of massage.

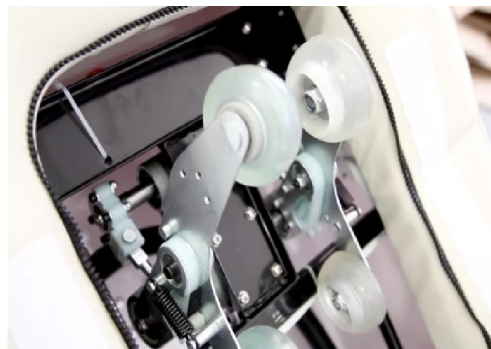

Levels of massage:

Each massage has 7 different positions in height from the lowest part of the back to the highest one.

Types of massage:



SHIATSU: Also known as acupressure. It gets the inspiration from the massage applied with the fingers making pressure on the back.

KNEADING: Smooth massage that gently pinches the parts of the body with the fingers.

FLAPPING: Nimble massage that simulates by giving light blows with the palms of the hands.

K. KNOCKING: Massage applied with the fists.

K. FLAPPING: Combined massage: kneading + flapping.


General settings:



The first block of the hand-controller gathers several functions, some of which are only available according to the type of pedicure armchair. The buttons which are not active in reference CALN 4122B are PULSATOR, MUSIC and HOT.

Press POWER button to start the hand-controller and select HEIGHT to choose the position of the dorsal massage. There are 7 positions in height to select from 0 to 60 cm.


TIME: Adjustment of the massage time. With this button, the massage time can be selected up to 20 minutes, with 5-minute intervals.

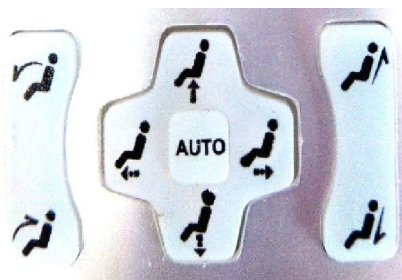

The second block of the handcontroller adjusts the main positions of the armchair. The selectors at the left-hand side control the inclination of the backrest. Press the button above to lift the backrest and the one below to take it down (from 50 to 75°).

The central buttons are used to adjust the back and forth movement of the chair. The 2-engine version of CALN chair does not allow height adjustment. Press the button on the left and the right to move the seat back and forth (stroke from 0 to 10 cm). This model of armchair does not allow lifting the seat. The button AUTO has 4 modes: A, B, C and D. The modes C and D are not currently available.

The automatic mode A combines a type of massage in each position of the back. The automatic mode B works each type of massage in every position of the back.

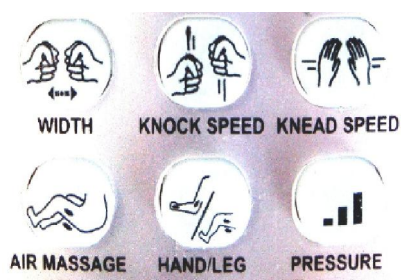

WIDTH: This button allows adjustment of the width of the wheeled massage mechanism in order to change from 34 to 42 cm. It can be selected in all the kinds of massages, except for the FLAPPING option.

KNOCK SPEED: Adjustment of the massage speed in 5 different levels. Only to be selected in the KNOCKING option.

KNEAD SPEED: Adjustment of the massage speed in 3 different levels. Only to be selected in the KNEADING option.

AIR MASSAGE: Activation of the air-pressure massage on the seat.

HAND/LEG: Not available.

PRESSURE: Adjustment of the massage intensity by air pressure. There are 3 different levels.

Audio adjustments:

Connection for MP3 devices, USB, memory card and headphones.

The usual audio adjustments are controlled by the 5 last buttons of the hand controller.

Play / Pause
T
Previous and next track
Volume + / -



Armchair performances

Adjustable footrest

The CALN armchair integrates a padding footrest which is adjustable in height by means of a simple system so as to ensure that both the professional and the patient have the maximum comfort.




Armrest with manicure bowl

Both armrests include an interior housing with a removable manicure bowl. One of the armrests also counts on a space conceived for storing the armchair remote control



Facilities and features of the basin

Whirlpool mechanism and LED

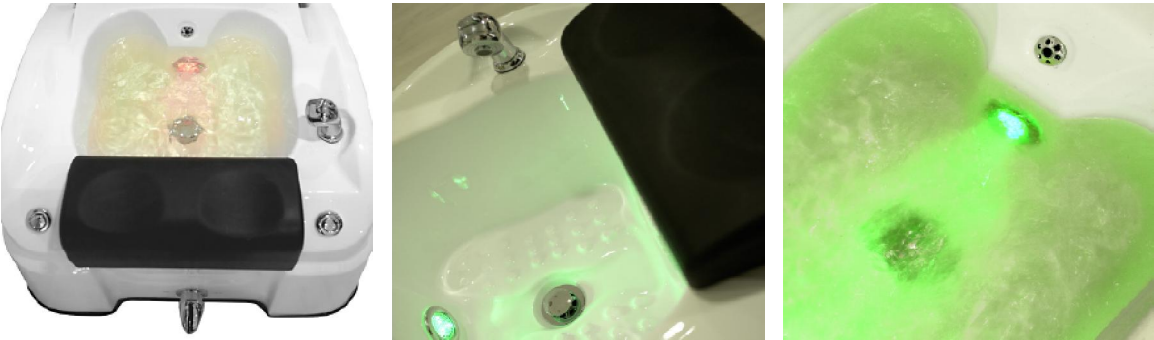

Extensible shower for rinsing Drainage of basin



Cold and hot water

Technical specifications:		
Dimensions and weight	Packaging size (cm)	120 x 77 x 62 cm
	Product size (cm) W x H x D	147 x 85 x 53 cm
	Gross weight (kg)	130 x 85 x 150 cm
	Net weight (kg)	65/65
		110
Electrical specifications	Voltage	220V—240V
	Frequency	50 Hz/60Hz
Maximum loading weight		120 kg
Vertical stroke of the massage wheels		from 0 to 60 cm
Horizontal stroke of the massage wheels		from 34 to 42 cm
Air-pressure massage		30 - 40 kPa
Adjustment of the backrest angle		from 50 to 75°
Stroke of back and forth of the seat		from 0 to 10cm
Adjustment of the massage time		up to 20 min



Visit our TECHNICAL INFO and download all the technical information that you may need. Pictures, dossiers or technical sheets. Do not miss them.

Dossiers | Technical Zoom



